





ISTRUZIONI DI MONTAGGIO
PORTE CON CERNIERE INVISIBILI







DOORS WITH INVISIBLE HINGES
ASSEMBLY INSTRUCTIONS

CONTENUTO SCATOLE

PART LIST


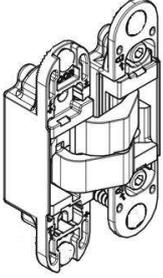
<p>x 4</p> 	<p>x 2</p> 	<p>x 1</p> 	<p>x 1</p> 	<p>x 1</p> 	<p>x 2</p> 	<p>x 2</p> 
<p>x 1</p> 	<p>x 1</p> 	<p>[Ø4x60] x 4</p> 	<p>[Ø4x35] x 4</p> 	<p>[Ø4x18] x 4</p> 	<p>x 2</p> 	

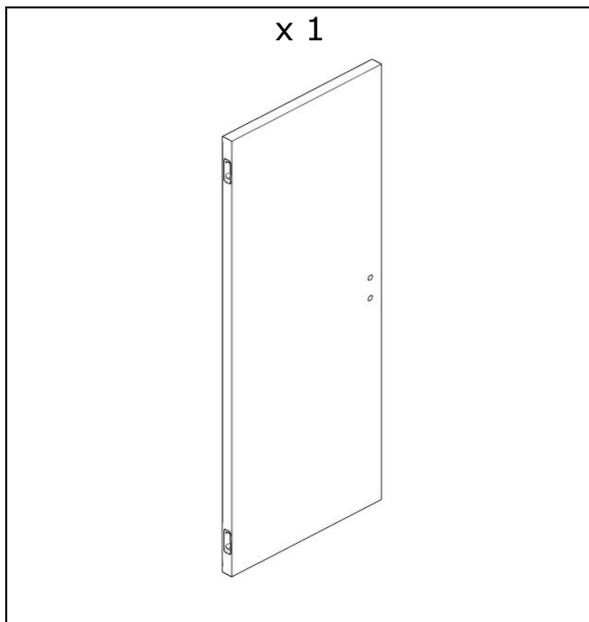
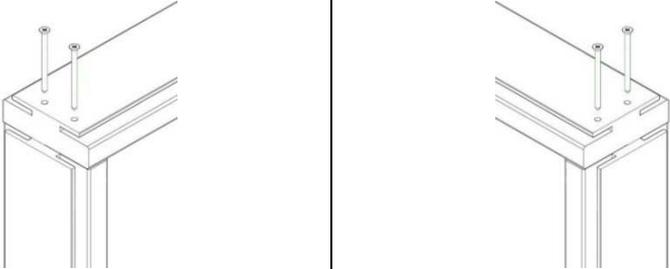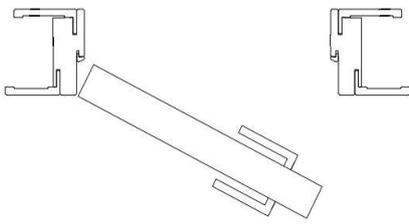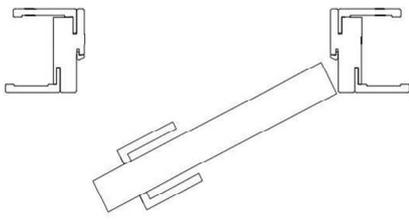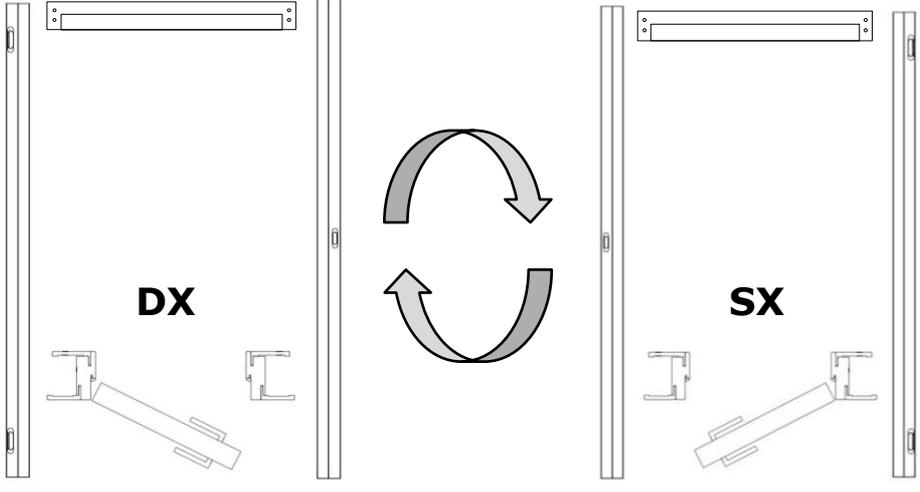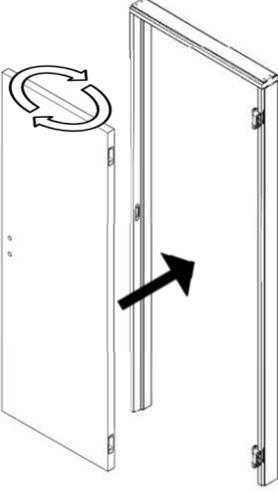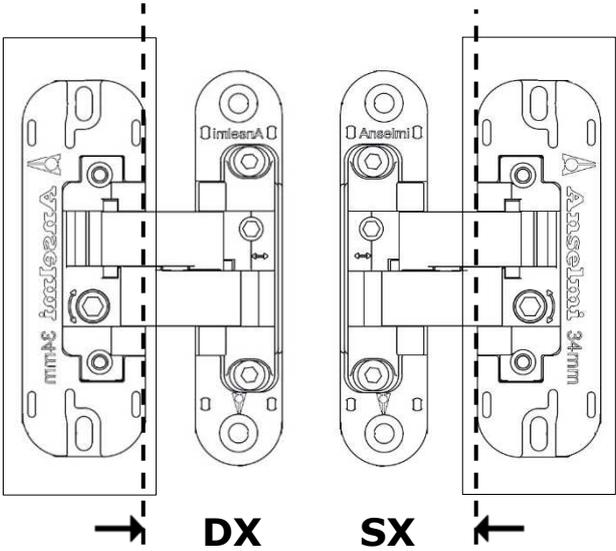
<p>Assemblare il telaio utilizzando le viti \varnothing 4x60</p> <p><i>Assemble the frame using \varnothing 4x60 screws</i></p>		
<p>Senso di apertura</p> <p><i>Opening side</i></p>	<p>DX</p> 	<p>SX</p> 
<p>Telaio reversibile sopra/sotto</p> <p><i>Above/below reversible frame</i></p> <p>Anta reversibile fronte/retro</p> <p><i>Front/back reversible leaf</i></p>		
<p>Fissare le cerniere all'anta, in base all'apertura desiderata, con viti \varnothing4x35. Successivamente fissare l'anta al telaio inserendo le cerniere nelle sedi sul telaio e fissandole con viti \varnothing4x18. Regolare la posizione dell'anta rispetto al telaio come riportato di seguito.</p> <p><i>Fix the hinges to the leaf, according to the desired opening, with \varnothing4x35 screws. Then fasten the leaf to the frame by inserting the hinges into the predisposition on the frame and fixing them with \varnothing4x18 screws. Adjust the position of the leaf relative to the frame as follows.</i></p>		



Regolazione laterale

Side adjustment

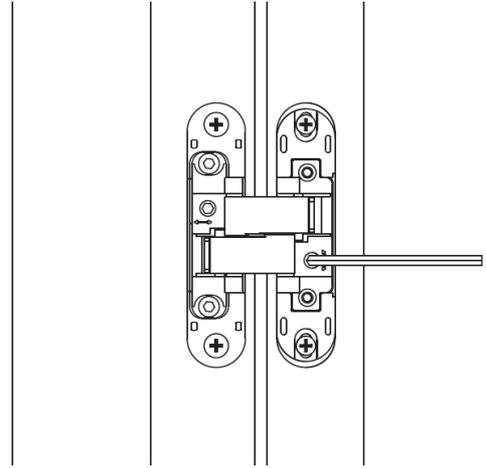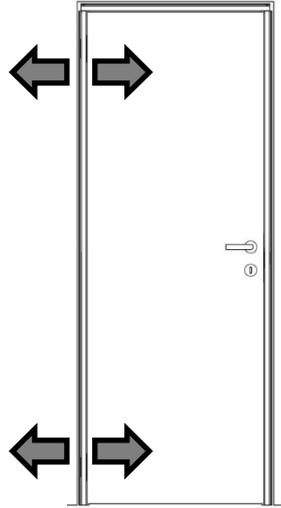



Regolazione verticale

Height adjustment

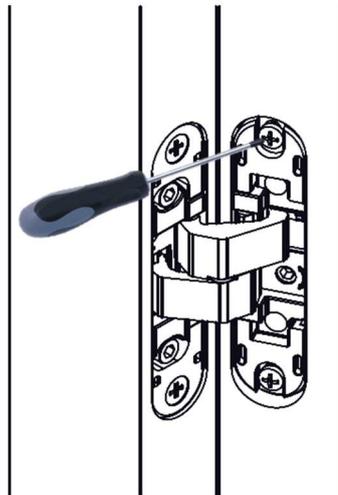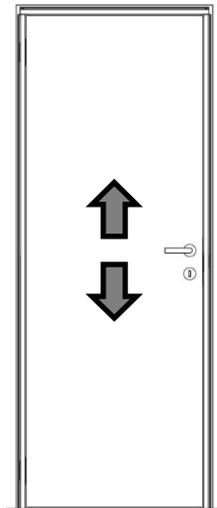


Regolazione di pressione

Pressure adjustment

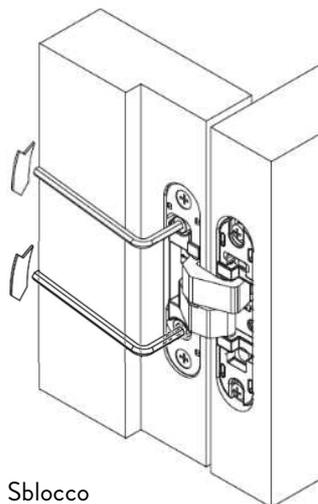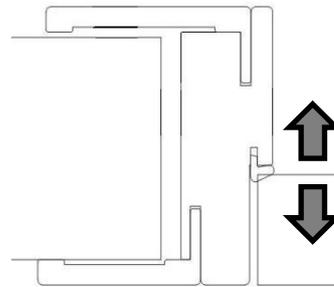

1 Sblocco
Unlock

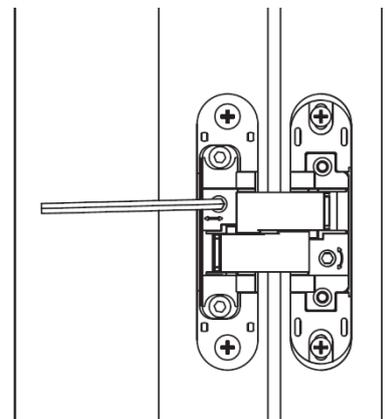

2 Regolazione
Adjustment